



DOUBLE NUT COVER DDM-17-6



This is a simple piece designed to cover the double locking nuts on the rear axle of the Polaris Slingshots. It installs easily with 3 stainless steel set screws included with the kit and even comes with the Allen key that is required. Installation is simple and easy and the cover really dresses up the back of the Slingshot.

If you are pretty handy with tools the Double Nut Cover can be installed in 15 minutes however we suggest that you schedule at least an hour for the installation.

If you have any questions during the installation you can call or text (864) 907-6004 or email us at Tech@ddmworks.com.

TOOLS NEEDED

Hex L-Key, 3 mm Size (included)

QTY PART DESCRIPTION

QTY	PART DESCRIPTION
1	Double Nut Cover
1	3 mm Hex L key
3	8mm set screws
2	6mm set screws



119-A Hwy 183
Piedmont, SC 29673

Tech Support

(864) 907-6004 (call or text)


Email: Tech@DDMWorks.com






Double Nut Cover — INSTALLATION

1. Insert 8mm set screws a few threads to hold them in place during the install.
2. Place cover over nut and begin to tighten the top 2 set screws (or the easiest to access) Do not fully tighten. If you have a belt cover you may need to roll your vehicle until you can access the third set screw.
3. Snug the last set screw and check for visible threads. If there are visible threads on any of the set screws, remove cover and replace 8mm with 6mm set screws.

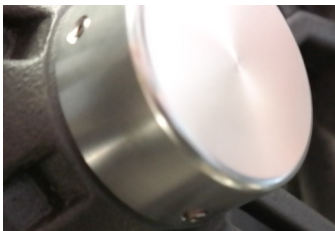


Threads visible

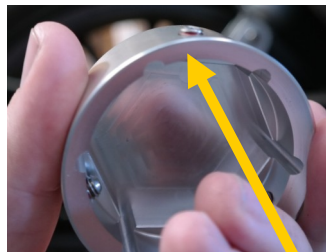


Replace with 6mm

4. Re-install cover and repeat Steps 2 and 3 but now fully tighten all set screws.
5. ENJOY! You have successfully installed your new Double Nut Cover!

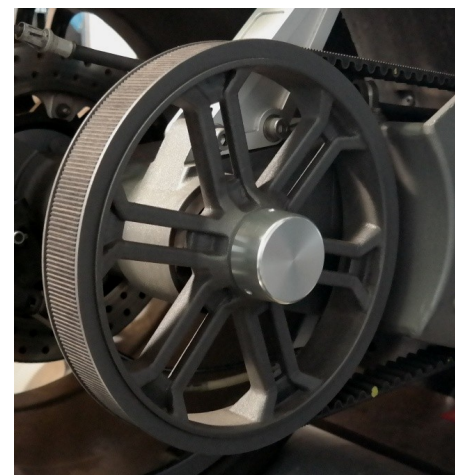

119-A Hwy 183
Piedmont, SC 29673

Tech Support
(864) 907-6004 (call or text)
Email: Tech@DDMWorks.com

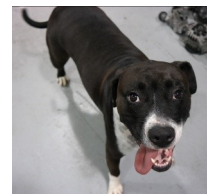

This product is
Buddy the
Turbo Dog
Approved!

