



DDMWorks Bumper Accent Panel



The bumper accent panel fits on the bottom of the stock bumper and adds some style and personality to your Slingshot. Installation is pretty straight forward, plan on about an hour to do the installation.


If you have any questions during the installation you can call or text (864) 907-6004. Email support is also available - Tech@ddmworks.com.

Tools Needed for Install	Packing List	
<ul style="list-style-type: none"> Drill (cordless preferred) 1/4" or 6mm drill bit 4mm allen key 10mm wrench or socket and driver Sharpie 	Qty	Part
	1	Bumper Access Panel
	4	M6 x 20mm long Button Head Bolts
	8	Large M6 Washers
	4	M6 nut

DDMWorks - 119A Hwy 183 Piedmont, SC 29673
 Tech Support Call, Text or Email: (864) 907-6004, Tech@DDMWorks.com

Installing Bumper Accent Panel


1. To install the panel, you will need to drill some holes in the lower portion of the front bumper. It is best to jack the Slingshot up and support it with jackstands to give room to be able to drill from underneath. The other option is to remove the lower front bumper. These instructions will show how to install the panel with the Slingshot on jack stands.

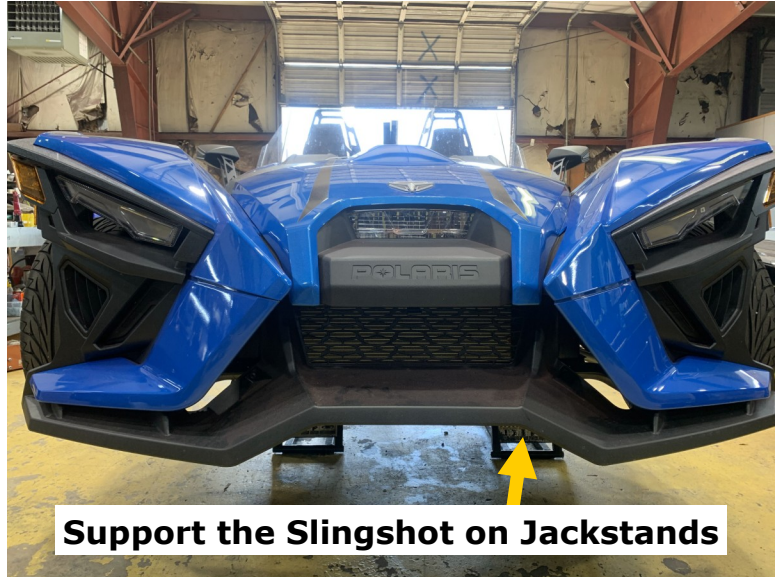

2. Hold the panel up into the approximate position it will be in when installed. Move the panel side to side until the top of the panel is centered on the opening.




3. Line the top of the panel up with the back edge of the black plastic front bumper.

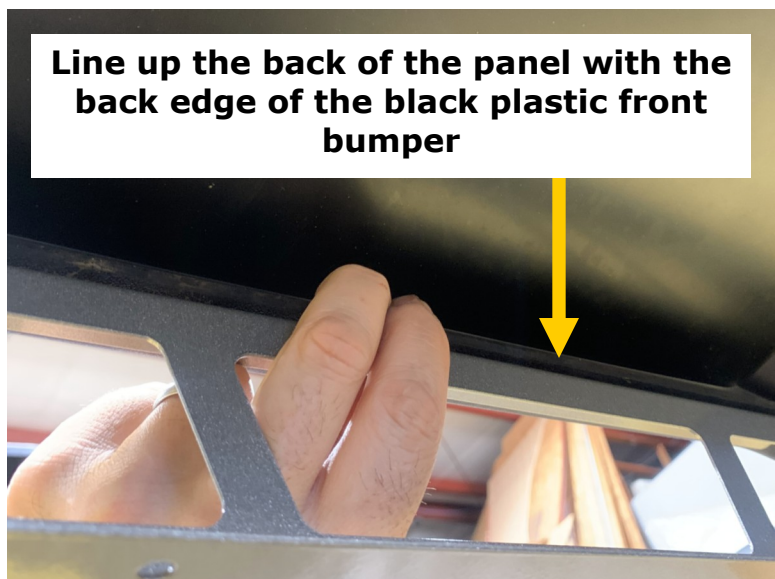

Installing Bumper Accent Panel

4. Use a sharpie (silver sharpie works great) to mark the holes that will need to be drilled. Drill the holes up through the bumper. Then use one of the bolts supplied to bolt the panel in place. When installing the bolt, put a washer under the head of the bolt and on the other side of the plastic when installing, tighten the nut once both bolts are started.

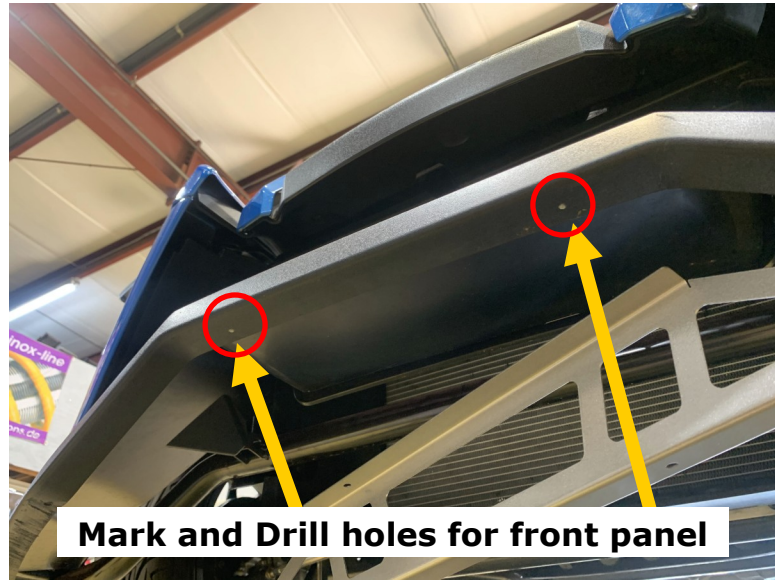

5. Next line up the bottom tabs of the accent panel with the back edge of the front bumper. Use your sharpie to mark the holes that will need to be drilled. You can tilt the panel forward a little bit to give room to drill the holes.



Installing the new DDMWorks billet oil cap

6. Use the supplied hardware to mount the tabs of the accent panel to the lower bumper. Make sure to put one of the supplied washers under the head of the bolt and another washer between the nut and the plastic front bumper



7. Make sure all 4 nuts/ bolts are tight and then lower the Slingshot off of the Jackstands. Stand back and enjoy the new personalized look of your Slingshot!



Congratulations! You have successfully installed your new lower panel. Let us know how enjoyed this product with a review on our website, Google or Facebook.

If you have any questions feel free to give us a call at 864-907-6004. You can also email us at Tech@ddmworks.com.