


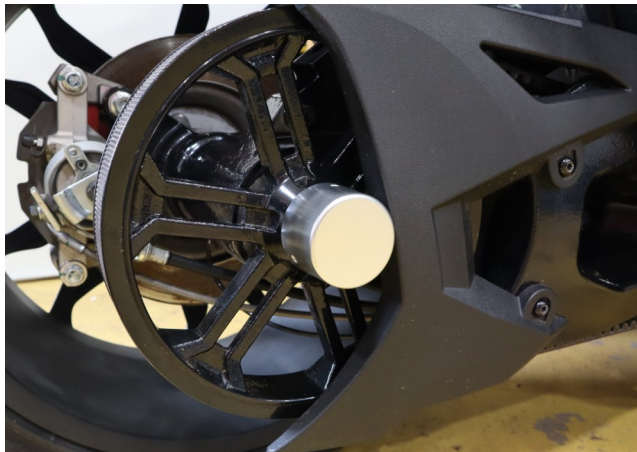

Rear axle nut cover for 2020+ Polaris Slingshot DDM-20-12



The DDMWorks rear axle nut cover cleans up the look of the back of your Polaris Slingshot by covering up the axle nut.

If you are pretty handy with tools the cover can be installed in just a couple of minutes.

If you have any questions during the installation you can call or text (864) 907-6004. Email support is also available - Tech@ddmworks.com.

Tools Needed for Install


- Allen key needed for install is included in the kit, no other tools necessary.

DDMWorks - 119A Hwy 183
Piedmont, SC 29673
Tech Support Call, Text or Email:
(864) 907-6004,



Installation of the rear axle nut cover—2020+ Slingshot

1. Installation of the oil cap is quick and easy to do. Look at the rear axle on the passenger side and you will see the nut that the cover will fit over.
2. Install the provided set screws into the rear axle nut cover, there are 3 threaded openings along the side of the cover.
3. Slide the nut cover over the rear axle nut and tighten the 3 set screws in even increments. Make sure to keep working around all 3 set screws to make sure they are all tight.
4. Installation is complete, we suggest checking the set screws to make sure they are still tight after a short drive.

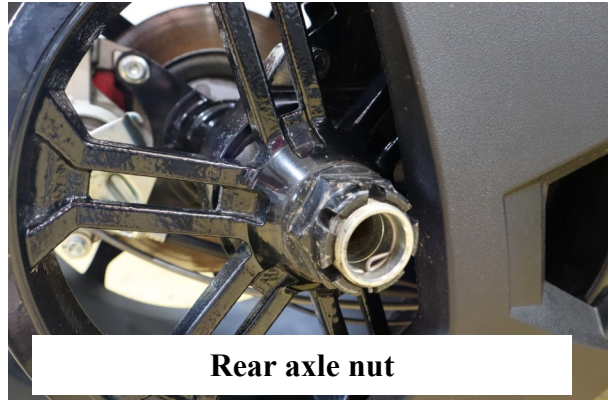

Congratulations! Install is complete!

If you have any questions feel free to give us a call or text us at 864-907-6004.

You can also email us at Tech@ddmworks.com.

