



Polaris Slingshot Hood Vent Inserts Kit DDM-21-7



This DDMWorks mesh inserts are designed to install into the hood vents we make, reducing the road debris and moisture coming up from the road.

If you are pretty handy with tools the inserts can be installed in about 15 minutes, however we suggest that you schedule an hour for the installation just incase.

If you have any questions during the installation you can call or text (864) 907-6004. Email support is also available - Tech@ddmworks.com.

Tools Needed for Install

Tools Needed for installation -

- Scissors

DDMWorks - 119A Hwy 183
Piedmont, SC 29673
Tech Support Call, Text or Email:
(864) 907-6004,




Installation of hood inserts

1. To install the hood vents the first thing is to make sure the bottom of your vents are nice and clean. Use a clean towel with soap and water to clean them the best you can. Then make sure to dry them thoroughly before starting the next step.
2. Use the supplied alcohol cleaning pads in the kit and make sure to wipe the entire bottom surface of the hood vents. Let dry for a few minutes.
3. Hold the larger insert up into place and mark the bottom of the insert with a sharpie. This mark allows you to know how far down to run the double sided tape.
4. Remove the insert and place the double sided tape like the picture to the right. The tape will go along the ribs and the center of the vent. The edges will get tucked slightly between the vent and the hood itself and will not need any tape.




Installation of hood inserts

5. Make sure to press the tape down to secure it to the hood vent. Then start to peel off the red backing on the tape.
6. Once the backing is all peeled off, the insert gets installed, you will want to install the wide end of the insert first. While putting it up into place, be careful to keep the insert from touching the double sided tape. It is helpful to watching the insert going in from the top of the hood to make sure you get the insert between the hood vent and the hood sub structure. The top corner of the insert will go in first, then the edge that goes between the vent and the hood substructure. Then press the bottom of the insert against the double sided tape to secure the mesh insert in place.
7. With the mesh insert in place, push and hold pressure against the bottom of the mesh to help it secure to the double sided tape. Hold pressure in an area for about 10 seconds and then move to another area and press again, repeat until you cover the entire vent where the double sided tape was applied.
8. The small mesh insert is a similar install, apply the double sided tape like the picture to the right, along the ribs and the center of the vent like the picture to the right.

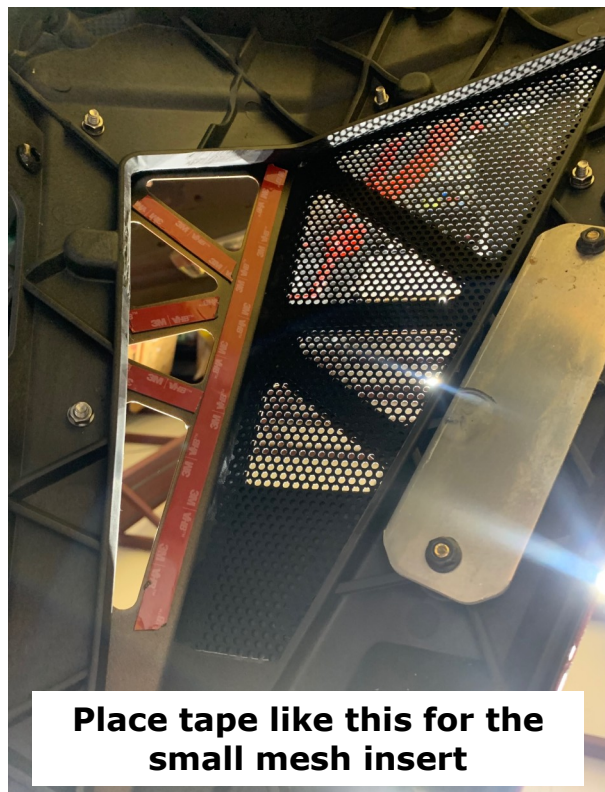

Installation of hood inserts

5. Make sure to press the tape down to secure it to the hood vent thoroughly. Then start to peel off the red backing on the tape.
6. Once the backing is all peeled off, install the insert onto the back of the vent, starting at the top corner again. Be careful to keep the insert from touching the double sided tape until the mesh is fully in place. Once the mesh is in place press the bottom of the mesh against the double sided tape to secure it in place.
7. Hold pressure on the bottom of the mesh insert for about 10 seconds in different areas and repeat until you cover the entire vent where the

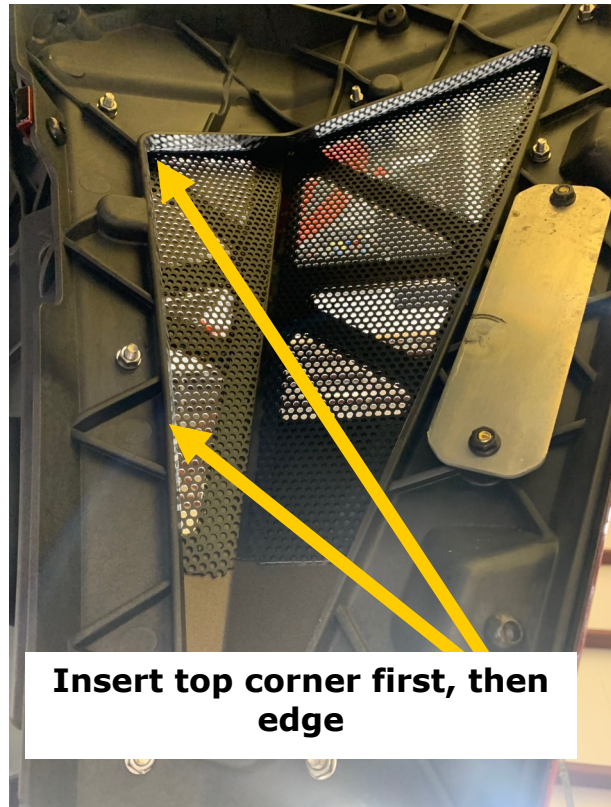

Congratulations!

You have finished the install. All of us here at DDMWorks thank you for your purchase and hope you enjoy your new mesh inserts!

If you have any questions feel free to give us a call or text us at 864-907-6004.

You can also email us at Tech@ddmworks.com.

Follow us on Face book, Instagram and Twitter for the latest product and information and product releases!

