




DDMWORKS 2 Bar Map Sensor Conversion Harness

When installing the 2 bar map sensor and its conversion wiring harness it is important to plug it in correctly or your vehicle will not run properly.

It is possible to have the plug flipped and connected incorrectly.

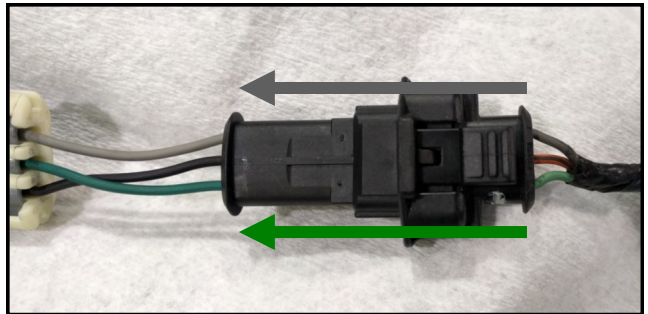

So when installing the harness, simply match the colored wires straight across from your vehicles factory wiring harness to the new conversion harness. **Grey** lines up with **Grey** and **Green** lines up with **Green**.



119-A Hwy 183
Piedmont, SC 29673

Tech Support
(864) 907-6004 (call or text)
Email: Tech@DDMWorks.com