



Slingshot Stainless Steel Shift Knob



This One Piece Stainless Steel Shift Knob for the Slingshot eliminates the need for a shift knob adapter and is one solid piece.

Installation time of the shift knob depends on you and your mechanical skills. It is suggested that you read through the directions a few times to familiarize yourself with the procedure.

If you are pretty handy with tools the shift knob can be installed in 15 minutes or less. If you have any questions during the installation you can call us at (864) 907-6004 or email us at Tech@ddmworks.com.

TOOLS NEEDED

5mm Allen Key



119-A Hwy 183
Piedmont, SC 29673
Tech Support
(864) 907-6004
Tech@DDMWorks.com


Rev A 5-6-15 ZPS

Removing the Stock Shift Knob

1. **Make sure your Slingshot is in neutral and the parking brake is on before starting installation.**
2. The first step of the installation is to remove the stock shift knob. At the bottom of the shift knob on the front there is a 5mm allen head cap screw. Using the 5mm allen wrench remove this bolt and lift the shift knob off.



3. The next step is to slip the new one piece stainless steel shift knob into place. The set screw should be facing forward so it will make contact with the flat surface of your factory shift lever.

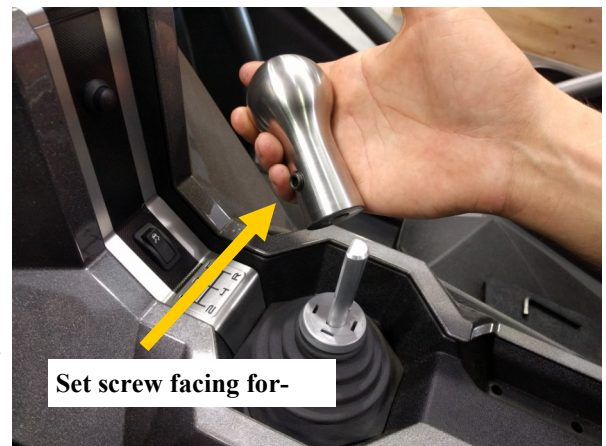

4. Using the 5mm allen wrench tighten down the set screw in the new one piece stainless steel shift knob.

5. Double check that it is tight and does not rotate or come off and that is it! You are finished and can now go enjoy your new shift knob.



Congratulations! You have finished the install. All of us here at DDMWorks thank you for your purchase and hope you enjoy your new shift knob.

If you have any questions feel free to give us a call or text us at 864-907-6004. You can also email us at Tech@ddmworks.com.

Rev A 5-6-15 ZPS