

PERFORMANCE PEDALS KIT



SLINGSHOT

P/N 2882334

APPLICATION

MY17 Slingshot and Newer

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.


DISCLAIMER ACCESSORY WEIGHT

When adding accessories, equipment, passengers and luggage to your vehicle, do not exceed the total weight capacity of the vehicle or of the front or rear axle (GVWR or GAWR as indicated on the Safety Compliance Certification label). Ask an authorized dealer for specific weight information if you need assistance. It is the owner's responsibility to use the Polaris Slingshot Accessories website as a tool for limiting the amount of accessories, based on maximum allowable vehicle weight requirements. It may be a violation of the Clean Air Act or the NHTSA regulations to disregard these requirements. For a complete listing of the accessories that are available for your vehicle, please contact your authorized dealer or visit the online store web site:

Web Address (United States): <http://www.polaris.com/en-us/slingshot/shop/accessories>.

KIT CONTENTS

This Kit includes:

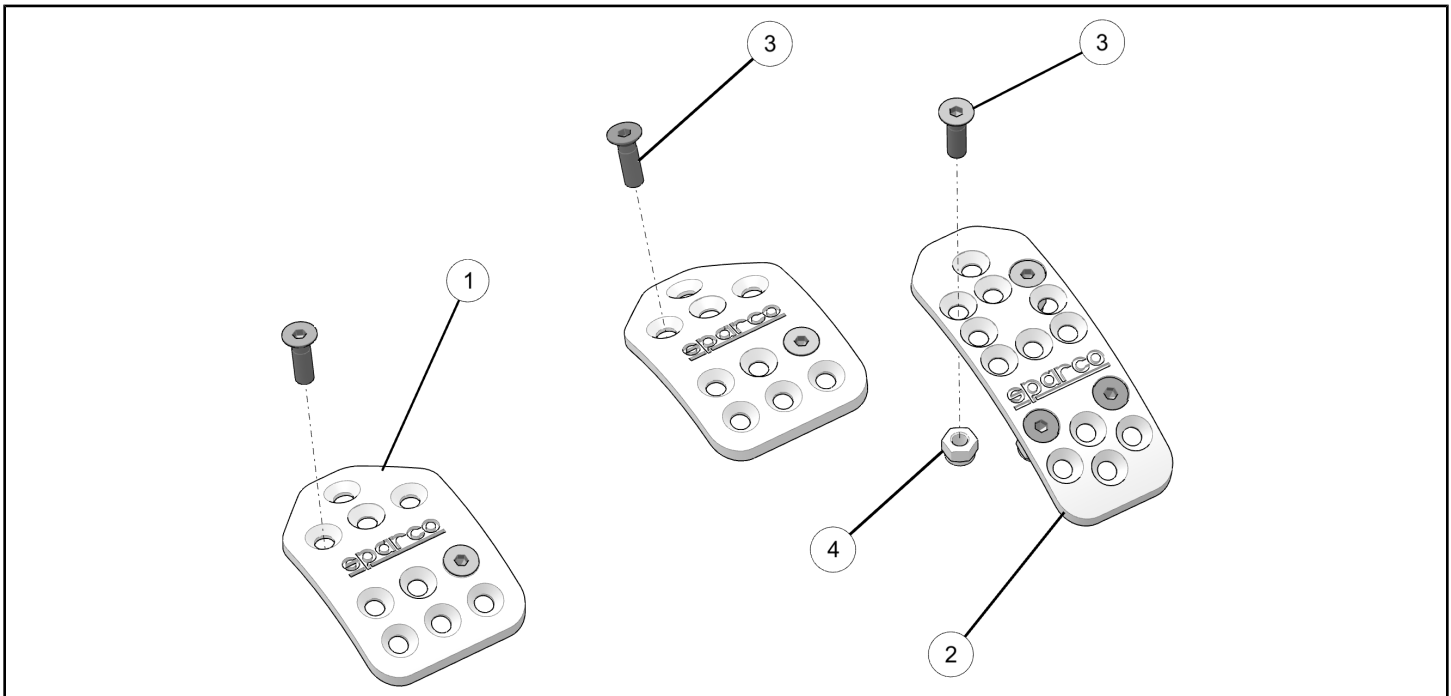

| REF | QTY | PART DESCRIPTION | PART NUMBER |
|-----|-----|--------------------------|-------------|
| 1 | 2 | Clutch/Brake Pedal Cover | 5262626 |
| 2 | 1 | Throttle Pedal Cover | 5262628 |
| 3 | 8 | Screw, M6 - 20 10.9 | 7520516 |
| 4 | 4 | Lock Nut, M6 - 4 | 7547833 |
| | 1 | Instructions | 9927604 |

TOOLS REQUIRED

- Safety Glasses
- Torque Wrench

- M4 Hex Wrench
- M6 Wrench

IMPORTANT

Your PERFORMANCE PEDALS KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

ASSEMBLY TIME

Approximately 10 minutes

INSTALLATION INSTRUCTIONS


INSTALLATION OF CLUTCH AND BRAKE PEDAL COVER

1. Put the transmission in "NEUTRAL" and turn the key to the "OFF" position. Remove the key from vehicle. Apply the parking brake.
2. Align the clutch pedal cover ① with the clutch pedal (A) as shown.

NOTE

Two of the holes in the clutch pedal (A) are threaded.

3. Install two screws ③ into the clutch pedal using M4 hex wrench.

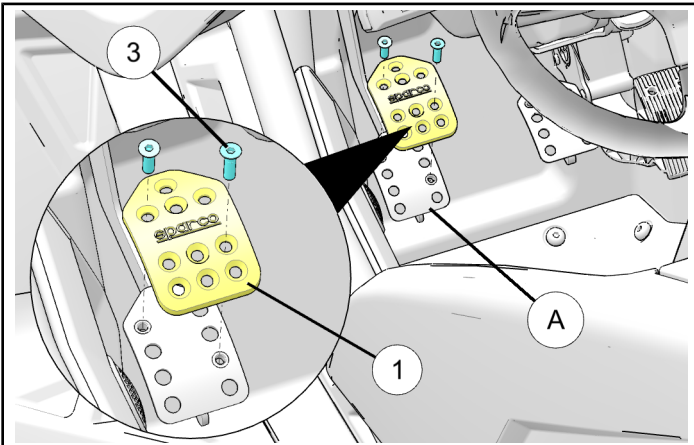

4. Tighten the screws ③ to specification using torque wrench.


TORQUE

24+/-3 in. lbs. (2.71+/-0. 33 Nm)

5. Repeat Steps 2-4 for the brake pedal cover ① installation.

INSTALLATION OF THROTTLE PEDAL COVER

1. Align the throttle pedal cover ② with the throttle pedal (B) as shown.
2. Install four screws ③ and four nuts ④ in the throttle pedal using M4 hex wrench and M6 wrench.

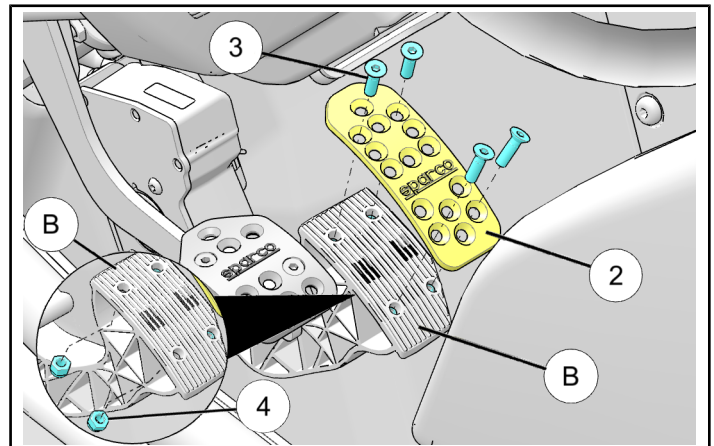

3. Tighten the screws ③ to specification using torque wrench.

TORQUE

24+/-3 in. lbs. (2.71+/-0. 33 Nm)