

Nelson & Nelson Mfg. 5210 Stadium Blvd, Suite C Jonesboro AR 72404 870-268-6393: Cell 219-1019

Installation Instructions 10-28-22

Model RYK-HPEG

Ryker Highway Pegs

DO NOT USE IMPACT DRILL ON BOLTS OR NUTS.

(Stainless Steel Hardware is Softer Metal and can strip the threads.)
You must use lubricant on bolts and nuts to prevent galling. Minimum WD40, preferably Anti-Seize
Stainless Steel Lubricant MRO 1000

Steps needed to install your Ryker Floorboard Highway Pegs




1.- Remove the two top button head screws from your existing Spyder Extras Floorboards. There is a left- and right-hand peg unit. Take the left-hand lower bracket and locate under the front of the floorboard as shown below. Take the supplied new button head bolts and screw the bolts into the floorboard and tighten down. Take the lower bracket and secure it to the bottom of the floorboard two new bolts using the suppled washers & locknuts. Do not fully tighten at this point as you can see on the bracket the highway peg can pivot outwards or inwards to fit your riding position.



2.-Next take the left-hand Peg and arm unit and install on the lower brackets with the supplied grade 8 socket bolts. Place the 3/8" socket head bolt in the arm pivot locations and the 5/16" bolt in the adjustable slot position. Snug all locknuts at this point. Sit on the Ryker and adjust the peg to a comfortable location. Remember the arm peg can rotate inward or outwards. Once the peg is located to your position, tighten down all locknuts. Once tightened place the rubber caps over the socket heads.

3.- Do the same for the right side. In this photo below the peg arm is rotated outwards.

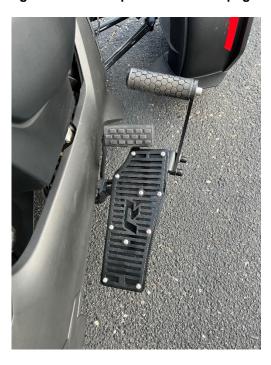

4.- Your Ryker Highway pegs are now installed. We know this will add a more comfortable ride to your Ryker!



Left Hand Peg Location

Right Hand Peg Location