



**Nelson & Nelson Mfg.**  
5210 Stadium Blvd, Suite C  
Jonesboro AR 72404  
870-268-6393 : Cell 219-1019


Installation Instructions 10-25-23

**Model RYK-SKD**  
**Ryker Skid Plate**

**Steps needed to install your Ryker Full Skid Plate. For all Ryker Models**




**1.- Remove all plastic or aluminum OEM skid covers from under the Ryker as shown below. Applies to all Ryker models**

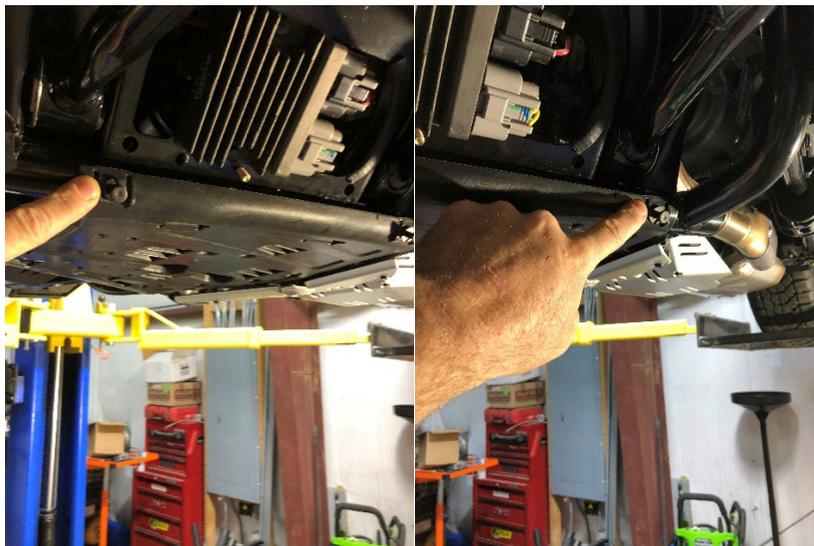



2.-If your Ryker is not using the Spyder Extras Grille Guard or Bumper kit you will need to use the Well Nut Kit Supplied to secure the upper portion of the Skid Plate to the frame in lieu of the plastic push pins. Simple place a Well Nut in each hole. Then raise the skid plate to its location. Take the supplied Socket Head bolt and washer and secure the skid plate to the frame using a 9/64 Allen Wrench. Do not tighten the bolt until all 4 Bolts are installed. Make sure the rear screws are installed too before tightening down as shown in step 3 below. Once all are installed, tighten down where the bolt starts to tighten with resistance feeling tight. That's tight enough to secure the plate. Then tighten the rear screws. Only use the Push Pins to fill the holes if you are using the Spyder Extras front Grille Guard or Bumper as that addition will secure the front of the skid plate by placing the Skid Plate between the Bumper or Grille Guard plate and the frame of the Ryker.

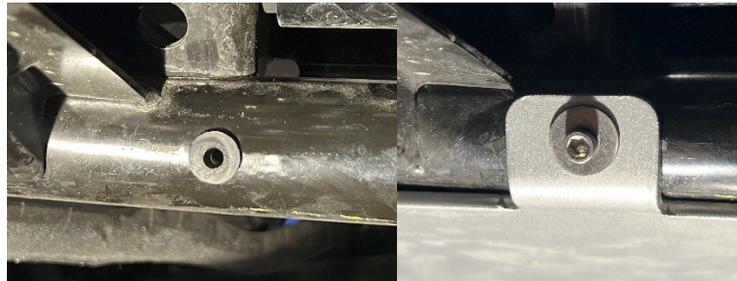

3.- Next take the Skid Plate and locate it under the Ryker with the rear of the skid plate aligned with the two mounting tabs on each side as shown below. Install the supplied screw. Do the same for the opposite side.



The result will look like this. Your new Skid Plate is now installed.

We thank you for purchasing one of our Ryker Products. Today we know the need for accessories that provide a higher level of comfort while riding and we have solved that demand with a stylish system that compliments the design of your Ryker®!

[spyderextras.com](http://spyderextras.com)